

## Missing Basic Features

A number of basic features available on your old Treo, iPhone, or other smart phone are not enabled in the Palm Pre. These are noted here so that you do not search for these familiar features that do not yet exist on the Palm Pre.

- Typing**
- ▶ The [onscreen keyboard has been found](#) but has all of the commands below and more in the webOS.
  - ▶ **Undo** - You can't undo a mistake in the Pre. On your PC Undo is [Ctrl] - [Z], on a Treo press [Menu] - [Z]. When enabled, Undo should be "Press the Gesture Area  and  at the same time."
  - ▶ **Italics** - To italicize highlighted text on a PC, press [Ctrl] - [I], on a Treo press [Menu] - [I]. Italics should be "Press the Gesture Area  and  at the same time."
  - ▶ **Bold** - To make highlighted text bold on a PC, press [Ctrl] - [B], on a Treo press [Menu] - [B]. Bold should be "Press the Gesture Area  and  at the same time."
  - ▶ **Select All** - To select all on a PC, press [Ctrl] - [A], on a Treo press [Menu] - [A]. When enabled, Select All should be "Press the Gesture Area  and  at the same time."
  - ▶ **Copy** - You can [Copy Text](#) you are editing but not text you cannot edit like a message or web text.
- Music**
- ▶ **Slider** - The slider bar is enabled for playing videos but not music. - [Developers are working on fixes.](#)
  - ▶ **Landscape** - You can watch videos in landscape mode (sideways) but not music graphics.
  - ▶ **Lyrics** - On an iPhone, tap the album graphic for lyrics. Pre Lyrics are there but not visible.
- Internet**
- ▶ **PDF's** - Can't open or save a pdf. Open workaround: Open website on a PC and email the pdf to the Pre.
  - ▶ **Flash** - Pre can't view Abode Flash graphics. There is no work-around.
- Email**
- ▶ [Landscape Hack](#) Open email and type "RocknRollHax" ▶ [Change Email Sound](#) ▶ [Forward Email Hack](#)
- LED**
- ▶ **Indicator** - The  Center Button is not enabled to indicate a call, email, text, etc. but could be!

## Protecting Your Pre

- ▶ [Insurance](#)
- ▶ [Skins](#) like the [Invisible Shield](#).
- ▶ [Skin Installation](#)
- ▶ [Cases](#)
- ▶ [Backup Your Pre](#)

## Get Help

- ▶ [Hardware Overview](#)
- ▶ [Overview Video](#)
- ▶ [Basics Video](#)
- ▶ [Sprint Support](#)
- ▶ [344-page Pre User Guide](#)
- ▶ [Setup Tutorial](#)
- ▶ [Setup Video](#)
- ▶ [webOS Overview](#)
- ▶ [Synergy Overview](#)
- ▶ [Notifications Overview](#)
- ▶ **From the Pre** - Tap  Launcher at the lower-right & tap  Help. (p. 11) ▶ Or tap  from the main screen!
- ▶ **Customer Service** - Dial \*2 from the Pre or 888-211-4727. ▶ Business Service: 1-800-927-2199. (p. 12)
- ▶ **Unofficial** - These are unofficial Palm Pre tips and tricks are compiled from the [PreCentral.net Forums](#).

## Turn the Palm Pre On/Off (p. 24)

- ▶ **Display On/Off** - Press  Power button  on the top to turn *display* on/off.
  - This just turns *display* on/off, but the phone, WiFi, etc. still use battery power.
  - [Airplane Mode On](#) turns off the phone, WiFi, etc. but PDA features still work.
- ▶ **Quick On** - Skip  Unlock, just open the keyboard . ▶ Mirror in back!
- ▶ **Keyboard** - If the keyboard is open, press any key to turn on. (p. 21)
- ▶ **All Off** - Press and hold  Power then tap Turn Off.
- ▶ **Sound Off** - Slide the Ringer Switch  on top of the phone right. A red bar will now be visible. Music is still heard.



## Connection Menu (Wifi, Bluetooth, and Phone)

- ▶ Tap the  signal bar or the time at the top of the screen to go to the Connection Menu.
- ▶ **Phone Off** - called "Turn On Airplane Mode". The  symbol now appears in the top-right corner
  - You can turn the phone on or off any time not just on an airplane as the manual states.
- ▶ **Phone On** - called "Turn Off Airplane Mode" ▶ Airplane Mode also turns off WiFi and Bluetooth. To turn them back on:
- ▶ **Bluetooth** - Tap the  signal bar then tap Bluetooth to turn on/off or change preferences.  appears when on.
- ▶ **WiFi** - Tap the  signal bar then WiFi. ▶  appears when on ▶ WiFi uses less power than cell ▶ WiFi is also faster

## Headset

- ▶ Insert the headset plug into the Headset Jack  and the Pre switches  Headset On for you.
- ▶ To answer a call when using a headset, just tap the headset button. ▶ Tap twice to go to the next song.

## Charger/USB

- ▶ Charger/USB cover too tight and in the way? The cover pulls out on a tether if you pull gently!
- ▶ Plug your USB cable into the Charger/USB connector ⑧ and choose Media Sync, USB Drive or Just Charge.
- ▶ You can change from Charge to Media Sync or USB Drive without unplugging. Tap USB notification at the lower-right.
- ▶ Pre as a USB Drive - Plug in the USB cable, choose USB Drive. ▶ You must safely unplug when done.

## Notifications

- ▶ Notifications on the lower area tell of new voicemail, email, events, & messages. ▶ [Notifications Overview](#)
- ▶ *Notification* - Tap the notification to act on it. (p. 73)
- If you do not respond in a few seconds, notification icons then appear at the lower-right of your screen.
- ▶ *Dashboard* - Tap the notification icon to see the Dashboard of all pending notifications.
- ▶ *Dismiss* - Throw a dashboard item left or right off of the screen to dismiss it.

## Application Menus

- ▶ Tap the menu on the top-left of any application for a menu of additional features while in portrait mode.
- ▶ Landscape - In landscape mode (sideways), tap the Volume Up or Down buttons for the hidden application menu.

## Zoom In or Out

In Email, Websites, Photos, Doc View, PDF View, Google Maps, etc...(p. 48)

- ▶ *Zoom In* - Pinch out: Place two fingers on the screen ②, slide them apart.
- ▶ *Zoom Out* - Pinch in: Place two fingers on the screen & slide them together.

## Gestures

- ▶ Small swipe left/right in the Gesture Area ④ to move back/forward. (p. 42)
- ▶ Swipe Up for Launcher ▶ See the [Gestures Overview](#) ▶ [Gestures Tutorial](#)

## Quick Launch (p. 52)

- ▶ Quick Launch is at the lower edge of the Launcher ②.
- ▶ Remove an app - Open ② Launcher Tap & hold an icon then drag up.
- ▶ Add an app - Tap & hold the ② Launcher icon then drag down.

## Phone

- ▶ *Make a Call* - Tap 📞 Phone from the Quick Launch bar. (p. 24)
- ▶ *My Number?* - Tap 📞 Phone, then Sprint menu at the top-left. (p. 95)
- *Insert a Pause* - Enter "p" for a pause in a dial string.
- *Timed Pause* - Enter "t" to insert a Timed Pause in a dial string.
- ▶ *Call a Number* - Type a number & tap 📞 Call. Tap 🛑 End when done.
- ▶ *Delete Digit* - To delete the last digit press ⌫ backspace
- ▶ *Delete Number* - To delete the whole number press & hold ⌫ backspace.
- ▶ *Call a Contact* - Type a name or tap 📞 Contacts to choose a contact.
- ▶ *Can't hear me* - Make sure the microphone ⑤ is not covered.
- ▶ *Can't hear them* - Make sure the Earpiece ① is not covered.
- ▶ *Call History* - Tap 📞 Phone, then 📞 Call History. (p. 95)
  - ▶ *Call* - Tap a number in Call History. ▶ *Save* - Save to Contacts 📞.
  - ▶ *View* - View Contact info 📞. ▶ *Delete* - Flick the entry to the left or right.
  - ▶ *Delete All* - Tap top-left Sprint menu then Clear Call History.
- ▶ *Silence a Call* - Press 🛑 Power or Volume Down ③. ▶ *Ignore a Call* - Press 🛑 Power twice to ignore a call.
- ▶ *Voicemail* - Speed dial 1 (the E key) is the *Easy* way to get Voicemail - or- Tap 📞 Phone then 📞 Voicemail.
  - The number of Voicemails will show up as a number in blue on the Voicemail icon!
- ▶ *Conference Call* - While on a call, tap 📞 Add Call, then 📞 Conference Call. (p. 94)
- ▶ *Speakerphone* - Press 📞 Speakerphone (or to use Bluetooth).
- ▶ *Answer a Call* - Skip the 📞 Unlock step - open the keyboard & press 📞. ▶ Music pauses until you hang up.



▶ **Answer Options** - When your Pre rings, these options appear:

→ Answer ▶ Ignore - send to voicemail. ▶ **Contact Info** - Add to Contacts or send a text **"Ignore With Text"**

## Speed Dial

- ▶ Speed Dials let you call a number from the main screen or the Launcher by pressing and holding a key.
- ▶ You can assign up to 26 Speed Dials to the letters on your keypad. So work might be "W", home might be "H", etc.
- ▶ To assign a Speed Dial, open the Contact, click the Contacts menu at the top left, tap Set Speed Dial.
- ▶ See a speed dial but not dial - Tap the letter from the Launcher or main screen. *Great if you are not sure which letter.*
- ▶ To call - in the main screen, Launcher, Card view, or Phone, press and hold the assigned speed-dial key.
- ▶ Speed dial 1 (the E key) is the *Easy* way to get Voicemail - or- Tap Phone then Voicemail.

## Contacts

- ▶ Open Contacts - Tap Contacts from the Quick Launcher on the lower screen area. (p. 132)
- ▶ New Entry - To start a new entry, press the new entry button ▶ [Contacts Overview](#) ▶ [Contacts Video](#)
- ▶ Use Gmail to import contacts from AOL, Comcast, Hotmail, Outlook, Verizon, Yahoo, etc. then sync the Pre to Gmail!

## Email

- ▶ [Email Overview](#) ▶ [Email Tutorial](#) ▶ [Email Video](#)
- ▶ To open Email - Click Email from the Quick Launcher bar at the bottom of the screen. (p. 200)
- ▶ **New Email** - Tap New Email . ▶ Enter a name, email, or click Contacts. ▶ Enter text and send
- ▶ **Delete an email** - In the inbox or other folder, flick the email to the right or left. (p. 46)
- ▶ **Undelete an email** - Go to the Trash folder, tap the email, tap the Email menu at the top left, Move to folder → Inbox.
- ▶ **Distribution list** - Create a Contact such as Office & in email field enter a list such as "email1; email2; email3; etc."
- ▶ **Add a signature** - In Email, tap the Email menu, Preferences & Accounts, choose your account, tap Signature.

## Calendar

- ▶ **New Entry** - Tap Calendar and tap place for new entry. ▶ Entries with symbols (&%@) don't sync. ▶ [Calendar Video](#)
- ▶ In the Calendar, chose Day, Week or Month Mode. ▶ Swipe your finger right or left or up and down to move.

## Typing

- ▶ **Move Section** - To move the cursor, hold down the Orange Key to move anywhere on screen. (p. 46)
- ▶ Many typos will autocorrect such as "tje" will correct to "the" and "thier" corrects to "their"
- ▶ **Autocorrect** "u " → "you" ▶ "thru " → "through" ▶ "i " → "l " ▶ "dont " → "don't"
- ▶ **Delete** - Press Backspace to delete a character
- ▶ **Delete Word** - Press and hold Shift and then Backspace (Delete)
- ▶ **Auto Caps** - First letter after a period is capitalized
- If the Pre Auto Caps in error, press Backspace twice to go back to lower case
- ▶ **Shift (Caps)** - Press Shift to capitalize the next letter you type
- ▶ **Caps Lock** - Press Shift twice for Caps Lock to capitalize all. Press again to turn Caps off.
- ▶ **Symbols** - Press the Symbol key and then the key to type it's symbol.
- ▶ **Symbols Lock** - Press the Symbol key twice for only symbols. Press Orange Key again to turn symbols off.
- ▶ **Select text** - To highlight text, press and hold Shift and slide you finger to highlight the text. (p. 46)
- ▶ **Italics** - Highlight the text. Press the Symbol key and I at the same time. Click the blank symbol.
- ▶ **Bold** - Highlight the text. Press the Symbol key and B at the same time.
- ▶ **Copy text** - Press the Gesture Area and C at the same time to copy the highlighted text. (p. 68)
- ▶ **Cut text** - Press the Gesture Area and X at the same time to cut the highlighted text. (p. 68)
- ▶ **Paste text** - Press the Gesture Area and V at the same time to paste the text. (p. 68)

## Universal Search

To find anything in contacts, email, calendar, Internet, etc. on the main screen (not in an app) type:

- ▶ **Contacts** - Type in a name like "mike" to find contacts, texts, etc. ▶ For all Mike's type "msmith" to find M\* Smith

*These unofficial Tips & Tricks have no guarantee or warranty. See your [Pre User Guide](#). Do not post without permission.*

▶ Websites - A site like "precentral.net" ▶ Google - Type a topic like "smartphone" ▶ Wikipedia is the Pre Wiki App

## Launcher

▶ [Launcher Overview](#) ▶ [Tutorial](#) ▶ [Multitasking Overview](#)

- ▶ Launcher can run several Cards (apps) at once. ▶ For instance you can listen to music as you view photos.
- ▶ **Quick Launch** - Tap the Phone, Contacts, Email, Calendar, in the Quick Launch area on the lower screen area.
- ▶ **Other Programs** - Press the  Launcher key in the lower-right or swipe up from the  Center Button .
  - ▶ You can also swipe up from the gesture area onto the screen when cards are minimized.
- ▶ **Reorder cards** - Press and hold a card, it'll zoom out -or- ▶ Tap in a blank area between two cards to reorder.
- ▶ **Minimize** - Press the  Center Button  or swipe up from the gesture area to minimize a Card. (p. 46)
- **Close an App** - Once minimized flick the card up to close that applicaiton. Now you can rearrange them. (p. 46)
- **Super Minimize** - Hold down a minimized card and it will get even smaller. ▶ Or tap an open area between the cards.
- ▶ **Maximize** - Maximize a shrunken card by tapping it.
- ▶ **Get information** -  Orange Key -  Symbol Key -  Gets info about the Card (application) you are using.
- ▶ **Move Apps** - Press and hold the App until a large circle appears then slide it on the page or to another page
- ▶ **Delete an App** - While pressing and holding the  Orange Key, tap the app icon to permanently remove it.
  - or- tap the Launcher menu at the top left, select List Apps, tap the app and click delete.

## Camera

- ▶ Tap  Launcher then  Camera. (p. 106) ▶ [Camera Overview](#)
- ▶ **<Space>** - To take a picture, press the spacebar.
- ▶ **Flash** - Flash is automatic but can be turned on off.
- ▶ **Lens** - Don't cover the  1 Flash or  2 Lens. Keep both clean.
- ▶ **Landscape** - To take a picture in landscape mode, turn the camera sideways and press the spacebar.
- ▶ **Auto** - To take automatically photos about once every second (1 fps), press and hold the space bar down.
- ▶ **Screenshot** - Press at the same time  Orange Key -  Shift -  P. Screenshots are stored under "screencaptures".
- ▶ **Sound Off** - Slide the Ringer Switch  B on top of the phone right to turn off the Shutter sound when you take a picture.



## Music

- ▶ Tap  Launcher then  Music. (p. 119) ▶ Or tap  M from the main screen then Music. ▶ [Music Overview](#)
- ▶ Tap  Play to listen to music on the Pre's speaker.
- ▶ Press and hold  to Fast Forward through a song.
- ▶ Tap  Fast Forward to skip to the next song.
- ▶ To listen to music using the headset, plug in the headset. The  symbol appears in the top right.
- ▶ To listen to music from your Pre on your stereo, plug in a 3.5 mm phono cable to the top jack on the Pre.
- ▶ When playing a song, tap the Music menu in the top-left for options for searching content.
- ▶ While playing music, press the  Center Button to do something else at the same time like  Email or  Internet!
- ▶ To add music use iTunes or Windows Media Player and Sync to transfer music.
- ▶ To delete music delete the song in iTunes or Windows Media Player and Sync.
- ▶ Download the [Palm Music Assistant](#) to copy music from your phone directly to your desktop music player.
- ▶ **Take a call** - To answer a call when listening to music with your headset, just tap the headset button.
- If you take a call while listening to music, playback automatically pauses and resumes when you hang up.
- ▶ Don't have an Aux port in your car? Turn your Pre into an FM transmitter! [Monster RadioPlay 300 FM Transmitter](#).

## Turn MP3's into Ringtones

The Pre can use the intro to a MP3 as a ringtone. ▶ [How to use other parts of a song, adjust volume, etc.](#)

▶ [Treo Ringtones](#) ▶ [1,000 Ringtones](#) ▶ [Ringtones & Wallpaper](#) ▶ [Free Sounds](#) ▶ [Wallpaper](#) ▶ [More Wallpaper](#)

## Internet

▶ [Web Overview](#) ▶ [Web Video](#)

▶ Press the  Launcher key in the lower-right corner of the screen, then  Internet. ▶ Or tap  W from the main screen.

*These unofficial Tips & Tricks have no guarantee or warranty. See your [Pre User Guide](#). Do not post without permission.*

- ▶ To find a website, just start typing a website name such as "precentral.net" from the main screen. -or-
- ▶ Search - You can do a Google search from any Internet page: Flick down and the search bar is now available.
- ▶ Add a Bookmark - While on a Website, tap the Web menu in the top-left then tap Add Bookmark.
- ▶ Delete a Bookmark - While in Web view, click Bookmarks, then flick an unwanted bookmark to the left or right.
- ▶ Landscape - In landscape mode, a gesture area up or down will scroll up or down so you can still see the text.
- ▶ PDF's - Pre can't open PDF's workaround: Open the website on a PC. Email the pdf to your Pre. Open the emailed pdf.
- ▶ [Great sites](#): ▶ m.precentral.net ▶ m.directv.com ▶ mobile.wikipedia.org ▶ m.yahoo.com  
▶ m.usatoday.com ▶ m.weather.com ▶ Weather: m.wund.com ▶ mobilegames.yahoo.com  
▶ m.espn.go.com ▶ iphone.ebay.com ▶ lyrics.twilightwap.com

## **Messaging** (Texting)

- ▶ [Messaging Overview](#) ▶ [Messaging Video](#)
- ▶ Open Messaging - Tap  Launcher then  Messaging. (p. 218) ▶ Or tap  from the main screen & tap Messaging.
- ▶ *New Conversation* - Tap New Conversation . ▶ Enter a number, or click  Contacts. ▶ Enter text and send 
- ▶ *Mass Texting* - To send a message to multiple recipients, add more numbers or  Contacts
- ▶ *Delete messages* - Flick the messages to the right or left then tap Delete to delete one or several at once. (p. 46)

## **Calculator**

- ▶ Tap  Launcher then  Calculator. (p. 164)
- ▶ Press spacebar - Turns on/off more advanced operations.
- ▶ You do not need to press the  Orange Key.

## **Special Phone Numbers**

Some phone numbers are actually "[Hash Codes](#)" that will open hidden applications. Be careful using these. Other codes are not listed because of the dangers.

- ▶ \*2 - Customer Service ▶ or 888-211-4727 ▶ Businesses: 1-800-927-2199
- ▶ \*3 - Make a payment
- ▶ \*4 - Check minute usage and account balance
- ▶ ##GPS# - (##477#) & Tap Get Fix *How high am I?* Get your GPS latitude, longitude, speed, and altitude
- ▶ ##TTY# - (##889#) Enables/disables TTY for the hearing impaired
- ▶ ##RUN# - (##786#) *How much have I used my Pre?* Get the total minutes (LifeCalls), data transferred, etc.  
*Do not use these drop down menus unless you are very experienced - can brick the phone.*
- ▶ ##DEBUG# - (##33284) Gives tower and signal strength (RX Power) - Zero is the best signal level.
- ▶ ##EVDO# - (##3836#) *Do not use unless you are experienced.*
- ▶ ##DATA# - (##3282#) Reset Internet Services, etc. Do not use unless instructed. See [Device Info](#) below.
- ▶ ##VPON# - (##8766#) Voice Privacy ON. Do not use unless instructed.
- ▶ #VPOFF# - (##87633#) Voice Privacy OFF. Do not use unless instructed.

## **App Catalog**

- ▶ Use App Catalog  to browse and download applications. (p. 79) ▶ Or tap  from the main screen!
- ▶ Read the reviews to see what others are saying before you try the application.
- ▶ See the screenshots to see how it works and usually you can try it for a week or so without buying.

## **Using Classic Palm Treo Apps**

- ▶ If you have any of the 2,000+ Palm Treo apps and would like to use on your Pre, consider [Classic Apps](#).
- ▶ Open the App Catalog  and find Classic. Read the reviews and try with your apps free for 7 days. \$30 to buy.

## **Homebrew Applications**

- ▶ [Homebrew User Created Applications](#) ▶ [Homebrew Instructions](#) ▶ [Rooting aka Jailbreak](#). Homebrews include:
- ▶ [My Notifications](#) ▶ [Solitaire](#) ▶ [Tetris](#) ▶ [Dot Game](#) ▶ [Stopwatch](#) ▶ [Translator](#) ▶ [My Tether](#) ▶ [PodCasts](#)

**Improving Battery Life** - Sweet 16 Tips

▶ [Tutorial](#) ▶ [Discussion](#) ▶ Battery life is an issue for many but there are a number of steps you can take that can help.

Display Off is not the same as Turn Off

- ▶ Tapping the  Power button on the top turns the *display* off but not the *phone* or in certain cases the WiFi radios.
- ▶ To turn everything off, press and hold the  Power button then tap Turn Off to turn off the phone, WiFi, Bluetooth, etc.,
- ▶ Check your remaining battery % by clicking on the battery icon  on the top-right of the screen.
- [Airplane Mode On](#) turns off the phone, WiFi, etc. but PDA features (calendar, contacts, etc.) still work.

WiFi Can Save Your Battery

- ▶ The WiFi will power down automatically when the display is off *unless certain web apps or pages were left running*.
- ▶ The Pre uses much less power to surf the internet using WiFi than a Sprint data network.

Email Can Drain Your Battery

- ▶ Reduce email drain: Tap  Email, the Email menu at the top-left, Preferences & Accounts, then the account & then...
- Check email less often: Set Get Email to 2 , 6 , or 12 hours or even manually. (As Items Arrive is best if available)
- Reduce notifications: Show Notification Off to not turn on display and Vibrate Off. Play Sound takes the least power.

Turn Off Everything You Can

- ▶ Save battery by not having cards (apps) open that you are not using. Press the  Center button then flick the card up.
- ▶ Set your screen to turn off after a shorter period of inactivity: Tap  Launcher, Screen & Lock , then Turn off after...
- ▶ Turn off all Location Services (you will be asked as needed now): Tap  Launcher, Location Services, turn each off.
- ▶ If you won't have phone reception, turn Airplane Mode On (phone off). Searching for a signal or roaming drains power.
- ▶ Reduce screen brightness: Tap  Launcher, Screen & Lock , and move the Brightness slider to the left.
- ▶ Turn off Camera Flash when possible: Tap  Launcher then  Camera and turn the flash off.
- ▶ Charge your phone often. The battery has a much longer useful life when it is topped off frequently.

**Get Updates** 

- ▶ You can update all of your applications at once. While it checks you can keep working! (p. 77)
- ▶ Tap the  Launcher key, then  Updates. Tap Download now if you like. (p. 78) ▶ Or tap  from the main screen.
- ▶ To quickly see available updates tap the  Launcher key,  Apps Catalog. Blue tabs mean updates are available.

**Device Info** 

To see your Phone Number, Battery remaining, Memory remaining, etc., check your Device Info

- ▶ To Open - Tap the  Launcher key, then  Device Info. ▶ -or- tap  from the main screen and tap Device Info.
- Tap More Info, Software, to see the version numbers of your applications

**Reset**

- ▶ Tap the  Launcher key, then  Device Info, Phone Reset Options. (p. 182)
- ▶ *Soft Reset* - Press and hold the power button while sliding the Mute button back and forth 3 times (p. 182) -or-
- Press  Orange Key -  Symbol key -  at the same time to also do a soft reset.
- ▶ Last Resort - Reprogram Over USB Using the "[Palm Doctor](#)"

**One-Key Shortcuts**

The Universal Search feature turns 26 keys into shortcuts! Tap one of these keys from the main screen or Launcher to see your assigned Speed Dials and applications that begin with these letters. To quickly clear the screen press  Backspace. Here are the shortcuts to a few of the most popular applications that came with your phone.

- |   |   |  |
|---|---|--|
| ▶  - App Catalog                     | ▶  - Help                          | ▶  - Sounds & Ringtones     |
| ▶  - Backup or Bluetooth             | ▶  - Language, Location Services   | ▶  - Service, Screen & Lock |
| ▶  - Calendar, Contacts, Camera      | ▶  - Memos, Music, Messaging, Maps | ▶  - Tasks, Sprint TV       |
| ▶  - DocView, Date-Time, Device Info | ▶  - NASCAR, Sprint Navigation     | ▶  - Updates                |
| ▶  - Voicemail                       | ▶  - Photos, PDF View, Phone       | ▶  - Web, WiFi              |